












## FITMENT INSTRUCTIONS



TOYOTA HILUX (REVO) DOUBLE-&amp;-EXTENDED CAB

XTREME, XPEDITION &amp; RHINOLITE

## FITMENT KIT CONTENTS

DESCRIPTION	QUANTITY	ILLUSTRATION
• M8 x 25 Hexagonal Bolt	4	
• M8 x 30 Hexagonal Bolt	12	
• M8 Nylock Nut	8	
• M8 Flat Washer	16	
• M8 Body Washer	8	
• M8 Spring Washer	8	
• Cab Side Bracket Inner	2	
• Cab Side Bracket LH	1	
• Cab Side Bracket RH	1	
• Tail Gate Bracket LH	1	
• Tail Gate Bracket RH	1	

## REQUIRED TOOLS

DESCRIPTION	ILLUSTRATION
• 13mm Spanner	
• 13mm Socket Wrench (Optional)	

## INSTALLATION TIME &amp; CARE INSTRUCTIONS

Approx. 45 Minutes (Excluding the removal of any accessories from load bin)

- ✓ Before installation, ensure that your hands and workwear are clean from oil, grime & dirt.
- ✓ Ensure that the correct tools and PPE are used whilst installing the canopy. Clean the rear cab window before fitting the canopy.

## FITMENT STEPS

## STEP 1


- ✓ Unpack all components and hardware from packaging: ensure that everything is accounted for as indicated above.

## STEP 2

- ✓ Remove any cab guards, roll bar, tonneau cover, sports bar etc. from vehicle.



## STEP 3

- ✓ Remove the factory fitted tie-down hooks.
- ✓ Insert the provided cab side and tail gate side brackets. (Image below)
- ✓ Secure brackets with provided bolts on the OEM tie-down points.
- ✓ Ensure that the rear cab window of the vehicle is clean, before loading the canopy onto the load bin.

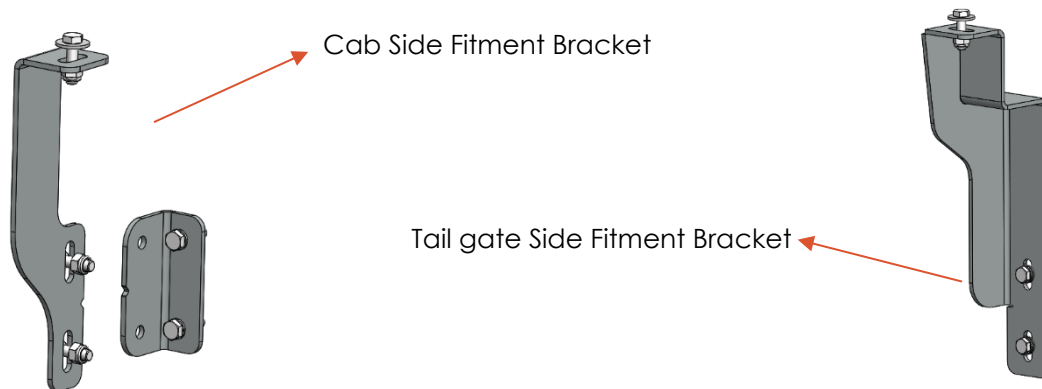

## STEP 4

- ✓ Fit the canopy to the loading bin, align & space evenly.
- ✓ Line-up the canopy fastening points with the brackets' fastening points. (Fig. 1).
- ✓ When the canopy is resting on the load bin, adjust the brackets to achieve a gap of approx. 6mm between the canopy fastening surface and the bracket top surface. (Fig2.)
- ✓ Secure the brackets to the load body by fastening the bolts slowly & securely.
- ✓ Secure the canopy to the brackets using the bolts supplied, tighten the bolts to secure the two surfaces firmly, into the factory supplied threaded holes.

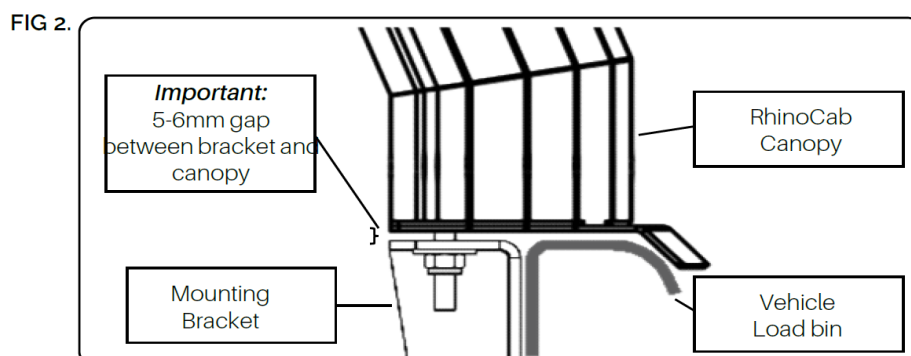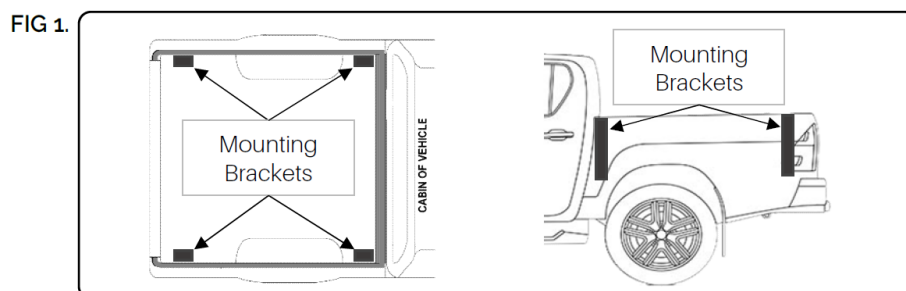



## STEP 5

- ✓ Trim sealing rubber on tailgate with knife or scissors.
- ✓ Check again for alignment of canopy on sides of loading bin.
- ✓ Check all bolts one final time.
- ✓ Enjoy your NEW Rhinoman all Aluminum Canopy.

SHOULD YOU HAVE ANY ENQUIRIES ABOUT THE FITMENT, FEEL FREE TO CONTACT US



010 010 0060



SALES@RHINOMAN.CO.ZA



RHINOMAN.CO.ZA